

DAWN HERO

Thanks for choosing our DAWN HERO bulkhead light products.
We strongly recommend you read this guide carefully before installation.

⚠ WARNING


- The luminaire must be installed by a licensed/qualified electrician in accordance with local wiring and relevant Australia standard.
- Ensure to disconnect mains supply before conducting any installation and maintenance the luminaire.
- Ensure input voltage conforms to the voltage range of product.
- Ensure all the wiring is correct and secured before connecting mains supply to the luminaire.
- Warranty is void if product is not installed according to the instructions.

Note: Product technical information and specification may change over time without prior notice. For latest information, please contact our customer service or visit our website www.haneco.com.au


Product Specifications

Product Code	Power Switchable	CCT	Input	IP / IK Rating	Operating Temperature
DN13WHR	9W / 13W	3000K / 4000K	220-240V, 50/60Hz	IP66 / IK10	-30°C to 50°C
DN13WHR-MS	10W / 14W				-20°C to 50°C
DN13WHR-EM	11W / 15W				0°C to 40°C
DN13WHR-MS-EM	12W / 16W				0°C to 40°C


Installation Instructions

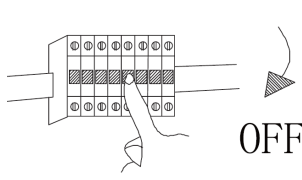


1. Switch OFF main power supply.

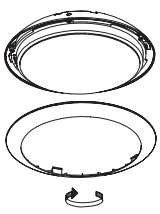


2. Unscrew the lid, counter-clockwise.

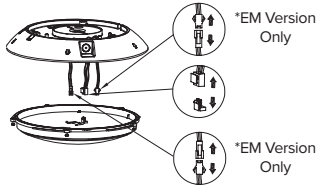


3. Unscrew the 5 x M4 screws, open the light cover and unplug the terminal(s) on the output connection cable on the light board.

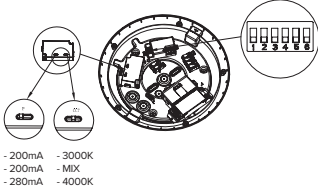


4. Dip the switches to the required sensor*, power and colour temperature settings.
* For Sensor Version

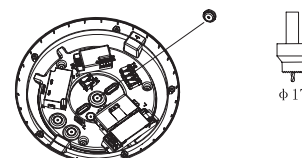


5. Using a Ø17mm drill, rotate through the cable entry hole in the base plate and place a waterproof coil over it.

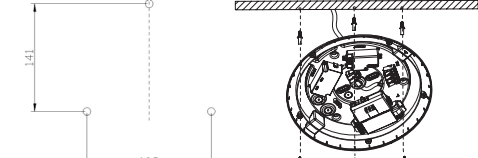


6. Mark and drill holes in the ceiling/wall, tap the expansion tube into the hole, run the cable through the water-proof coil and use M4 self-tapping screws to hold the base plate to the ceiling/wall.

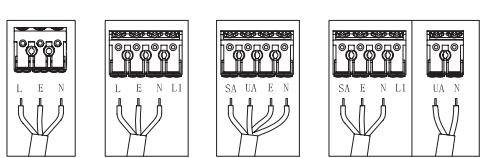


7. Connect the wires to the terminals as shown for your specific model.

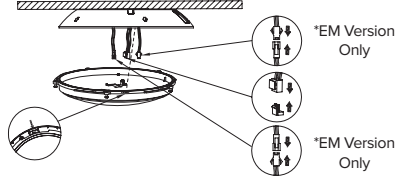


8. Plug the terminal(s) into the light board, align the lampshade notch with the T-shaped restriction bar on the base plate and tightening the 5 x M4 screws.

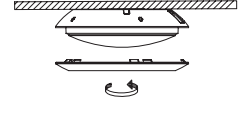

9. Tighten the lid clockwise.

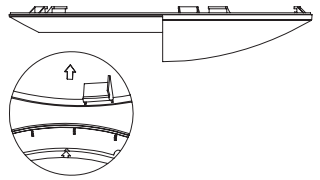


10. For Eyelid accessory: Adjust the arrow on the back of the Eyelid to the arrow on the lampshade and tighten clockwise.

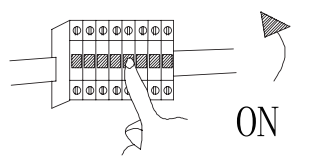

11. Finish the installation and switch ON main power supply.

DAWN HERO

Motion Sensor Instructions

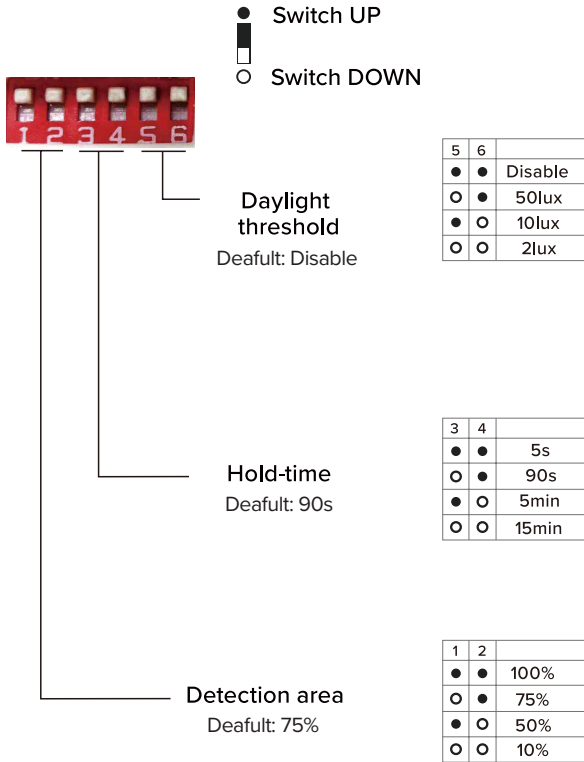

Definition of the ambient brightness; only when the ambient brightness is lower than the preset specific lux amount, the sensor will work; when it's preset as "Disable" the sensor works everytime it detects motion regardless of the ambient brightness.

The period of light keeping 100% brightness after moving objects leave the detection area.

In this area, movement will be detected and able to trigger the sensor. 100% detection area is also known as the strong sensitivity.

Detection Patterns

The highest mounting height is 6m. This figure indicates the maximum distance at the highest mounting height with 100% sensitivity.

