

2 TX Brackets required to make a tee, and 4 required to make a cross.

Order fasteners separately for installation (per TX Bracket)

4 x LTBOLT, 4 x LTNUT

LT3TXH



Approximate length required to make a 150 radius bend.

Tray Size	Length Required metres	Fasteners Required
LT3150	0.7	6
LT3300	0.9	6
LT3450	1.2	8
LT3600	1.4	8

Nominal length 2.0 metres.

Order fasteners separately for installation.

LT3RP



Available	Finish	Code

Zinc Plated LTNUT / LTBOLT


Hot Dip Galvanised LTNUTH / LTBOLTH

Both items are ordered separately.

Splice Bolts have a smooth head to eliminate the risk of sheathing the cable during installation.

Special counterbore nuts ensure that correct tension is achieved during installation.

LTNUT and LTBOLT

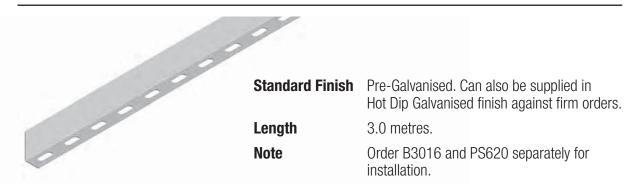

DSLT3 (Divider Strip to suit LT3 Laddertray)